LifeFitness

CROSS-TRAINER 93X-0XXX-01

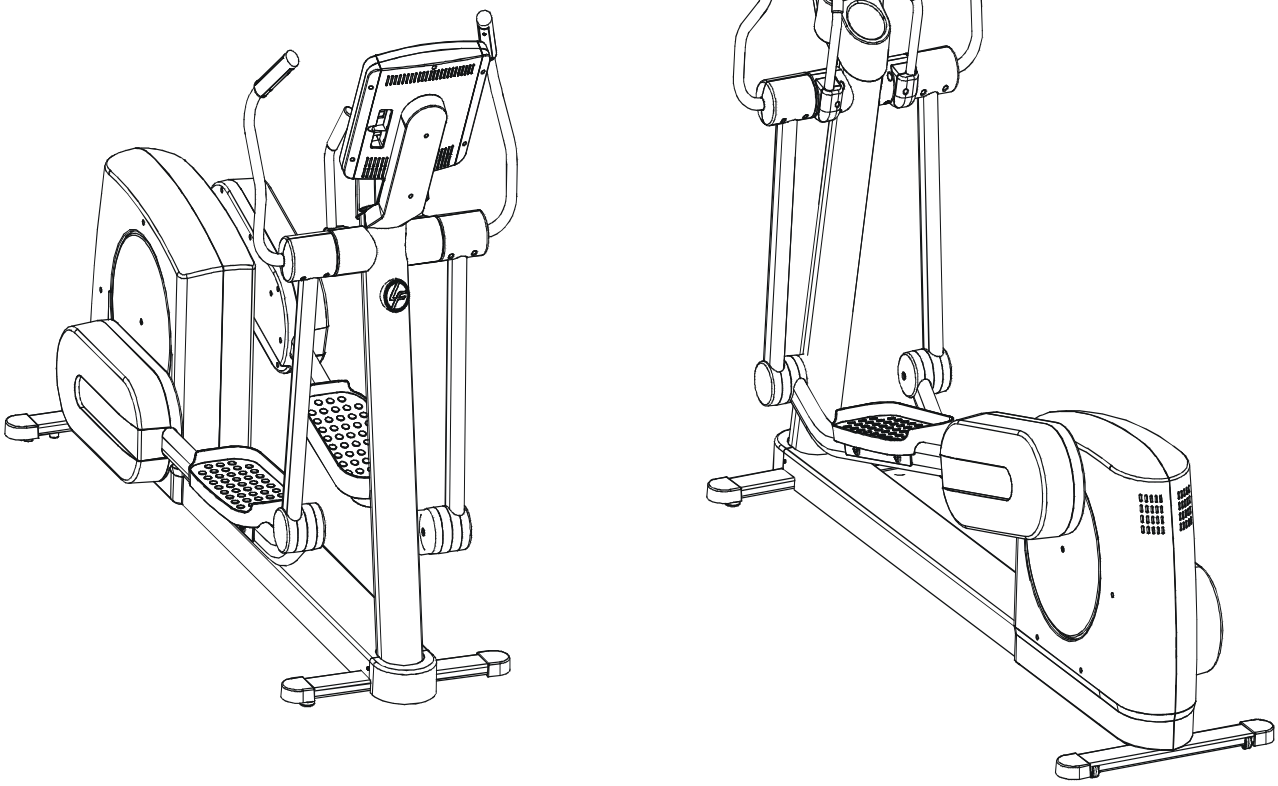

Customer Support Services

PARTS MANUAL rev 30 Jul 2008

OPERATION MANUAL	M051-00K62-A026
SERVICE MANUAL	M051-00K62-A060
HARDWARE BAG	AK62-00152-0001
PLUG IN OPTION 120/60	GK62-00002-0018
PLUG IN OPTION 240/50 UK	GK62-00002-0019
PLUG IN OPTION 240v AUS	GK62-00002-0020
PLUG IN OPTION 230/50 CONT	GK62-00002-0021
C-SAFE KIT	GK63-00002-0003

Page

CONSOLE SUPPORT & DEADSHAFT COVERS 4

HANDLEBARS AND BULLHORNS 5

CONSOLE AND RELATED COMPONENTS 6

UPPER FRAME HARDWARE 7

ROCKER ARMS AND PEDAL LEVERS 8

CRANK COVER AND LOWER CAPS 9

LOWER FRAME SHROUDS AND HARDWARE 10

PEDAL LEVER COMPONENTS 11

DRIVE MODULE COMPONENTS AND MAIN CABLE 12

DRIVE MODULE HARDWARE 13

CABLES 14

Note: The 93X has Telemetry only.

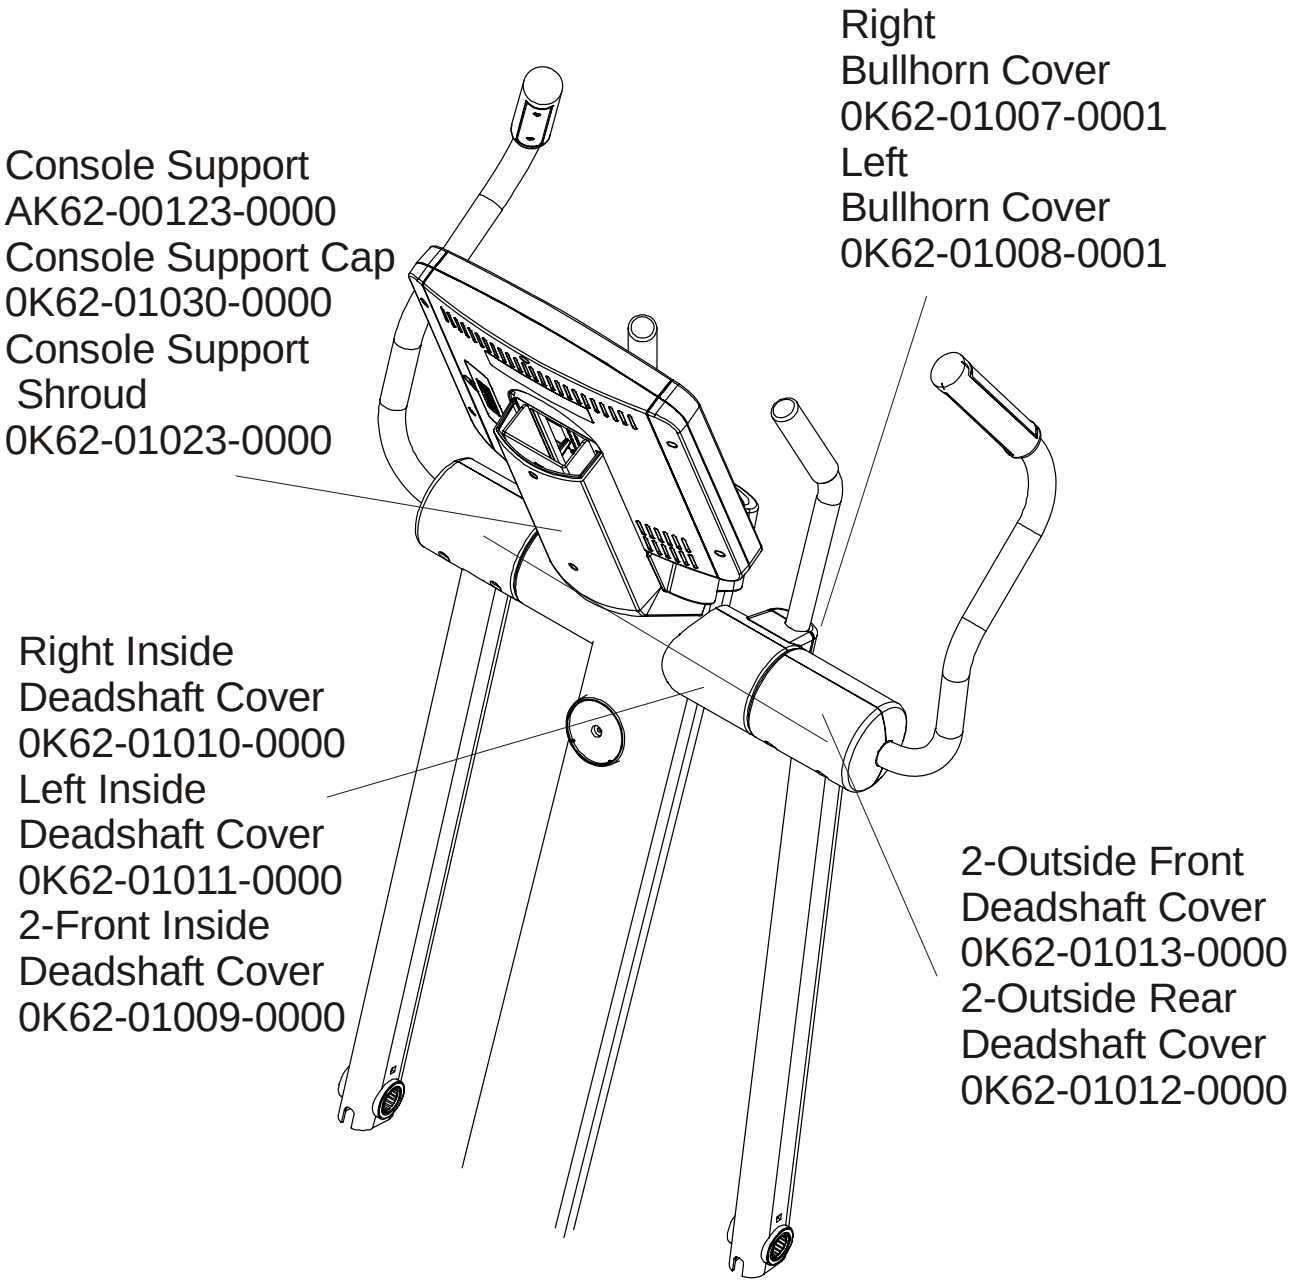
Right
Bullhorn Cover
0K62-01007-0001
Left
Bullhorn Cover
0K62-01008-0001
Console Support
AK62-00123-0000
Console Support Cap
0K62-01030-0000
Console Support
Shroud
0K62-01023-0000
Right Inside
Deadshaft Cover
0K62-01010-0000
Left Inside
Deadshaft Cover
0K62-01011-0000
2-Front Inside
Deadshaft Cover
0K62-01009-0000
2-Outside Front
Deadshaft Cover
0K62-01013-0000
2-Outside Rear
Deadshaft Cover
0K62-01012-0000

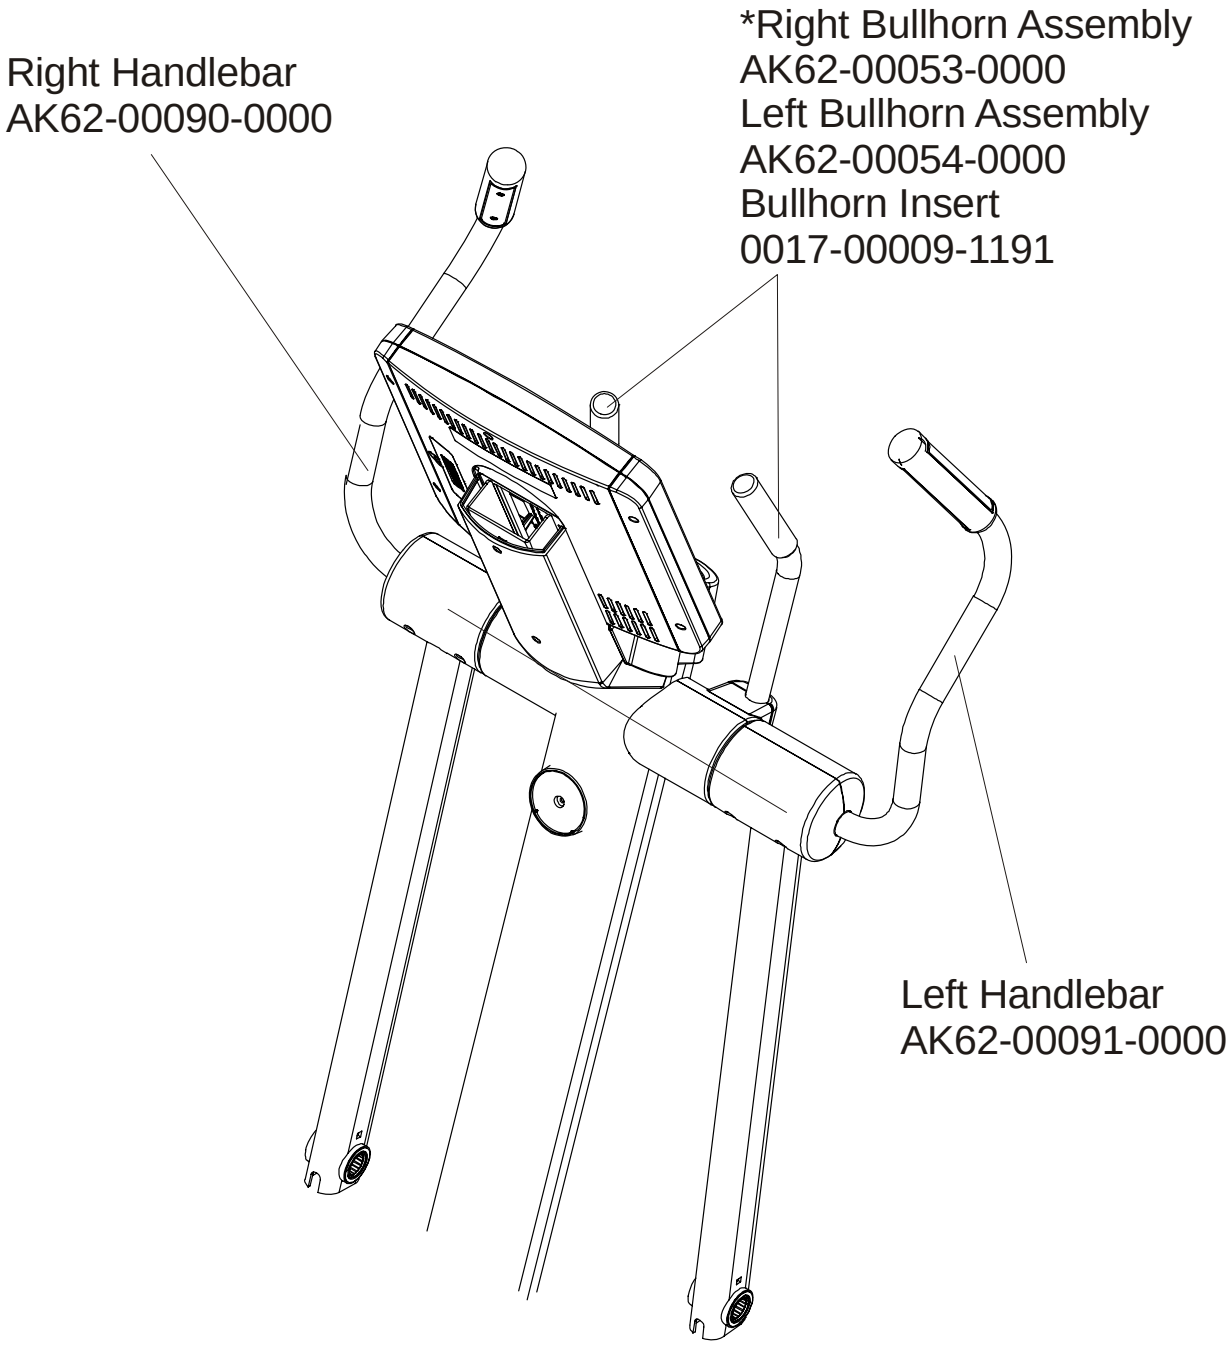

*Right Bullhorn Assembly consists of: AK62-00057-0000 Bullhorn, 0K62-01136-0000 Grip and 0K62-01199-0000 Gasket
Left Bullhorn Assembly consists of: AK62-00058-0000 Bullhorn, 0K62-01136-0000 Grip and 0K62-01199-0000 Gasket

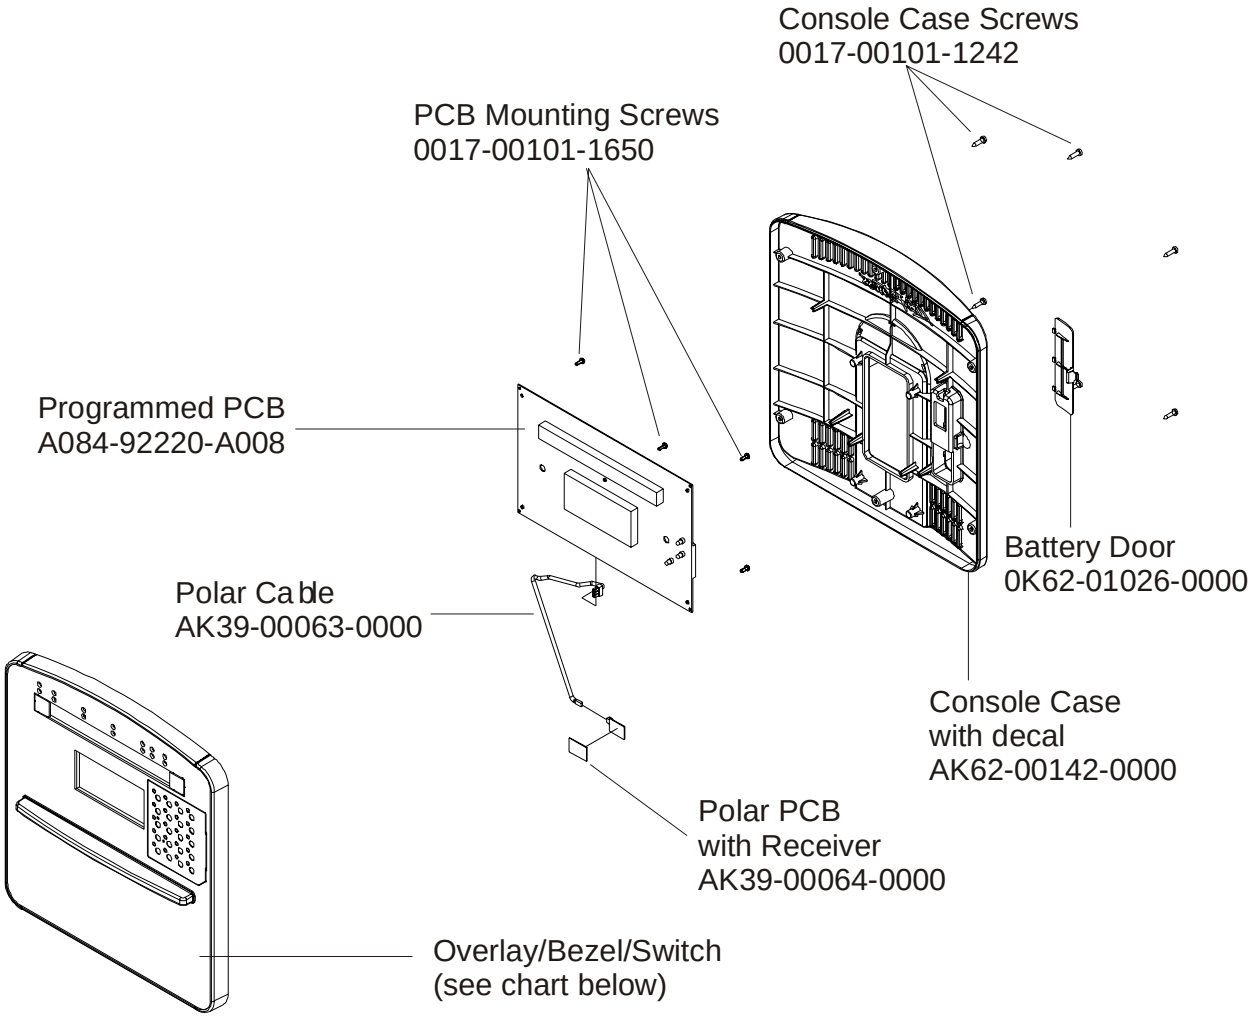

CONSOLE	OVERLAY/BEZEL/SWITCH	LANGUAGE
AK62-00150-0001	AK62-00190-0001	Eng + Met
AK62-00150-0003	AK62-00190-0003	Ger/Met
AK62-00150-0004	AK62-00190-0004	Spn/Met
AK62-00150-0006	AK62-00190-0006	Jap/Met
AK62-00150-0007	AK62-00190-0007	Frn/Met
AK62-00150-0008	AK62-00190-0008	Ital/Met
AK62-00150-0009	AK62-00190-0009	Dut/Met
AK62-00150-0010	AK62-00190-0010	Port/Met

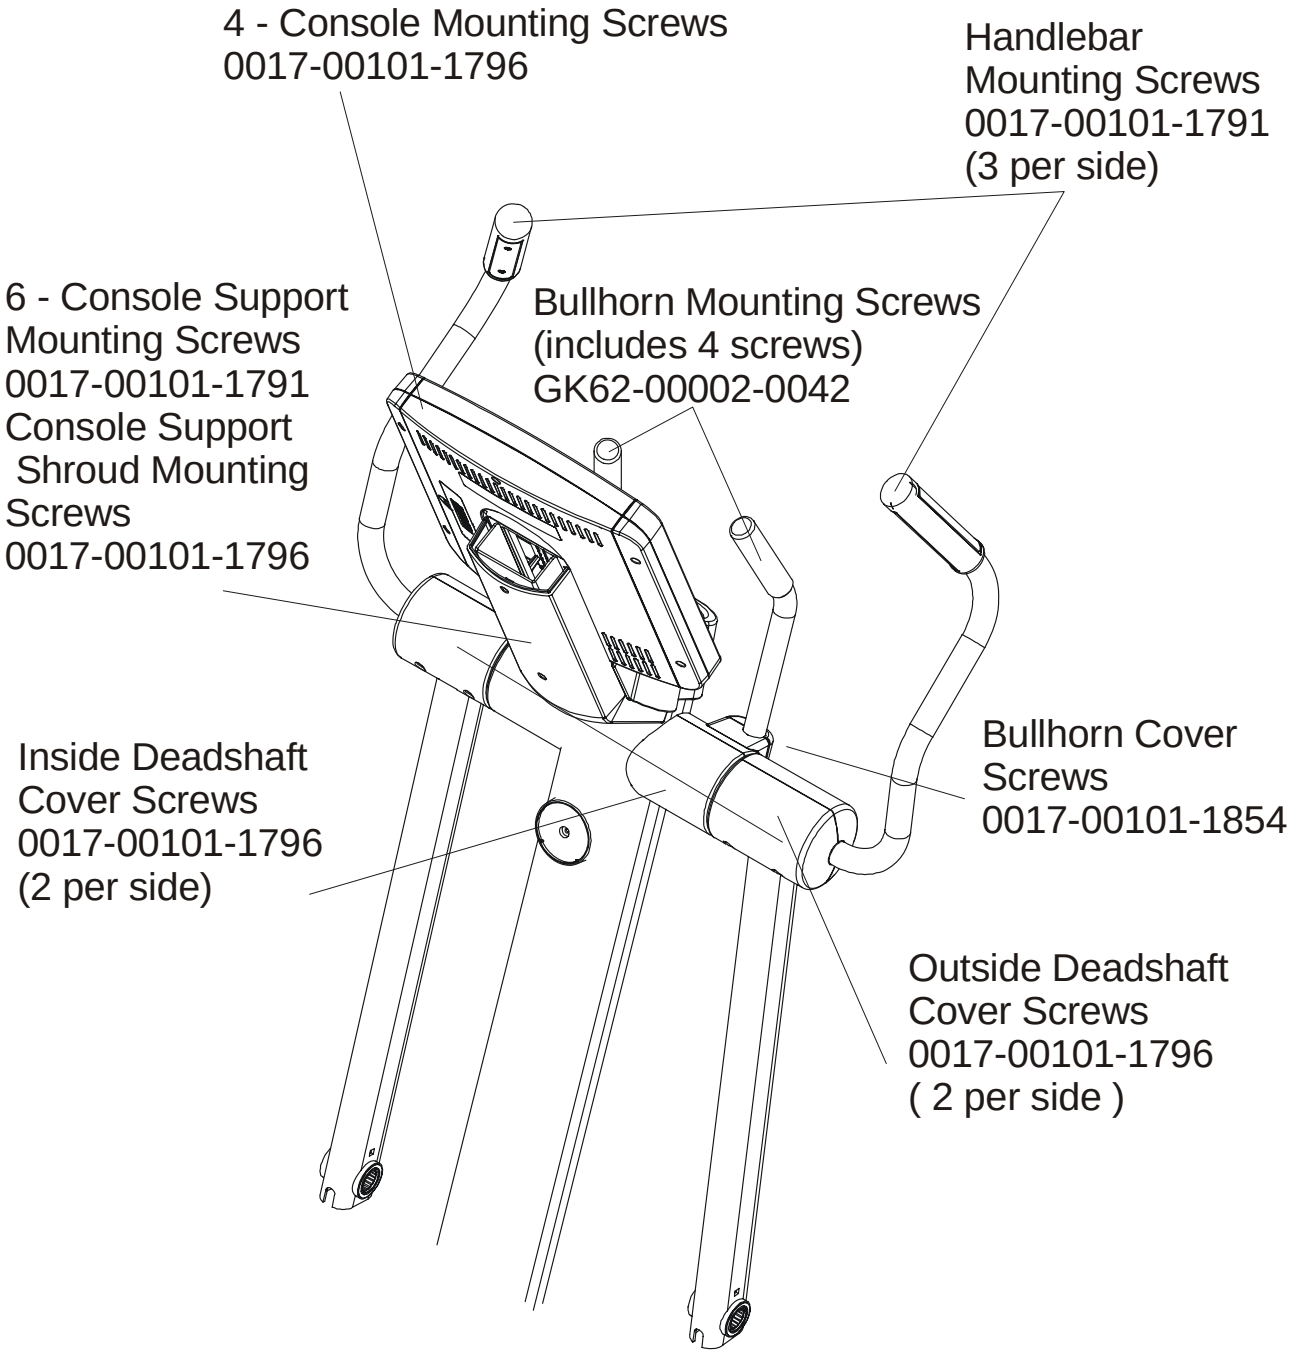

Items Not Shown:	
Accessory Tray	0K62-01022-0000
Mounting Screws (2)	0017-00101-1846

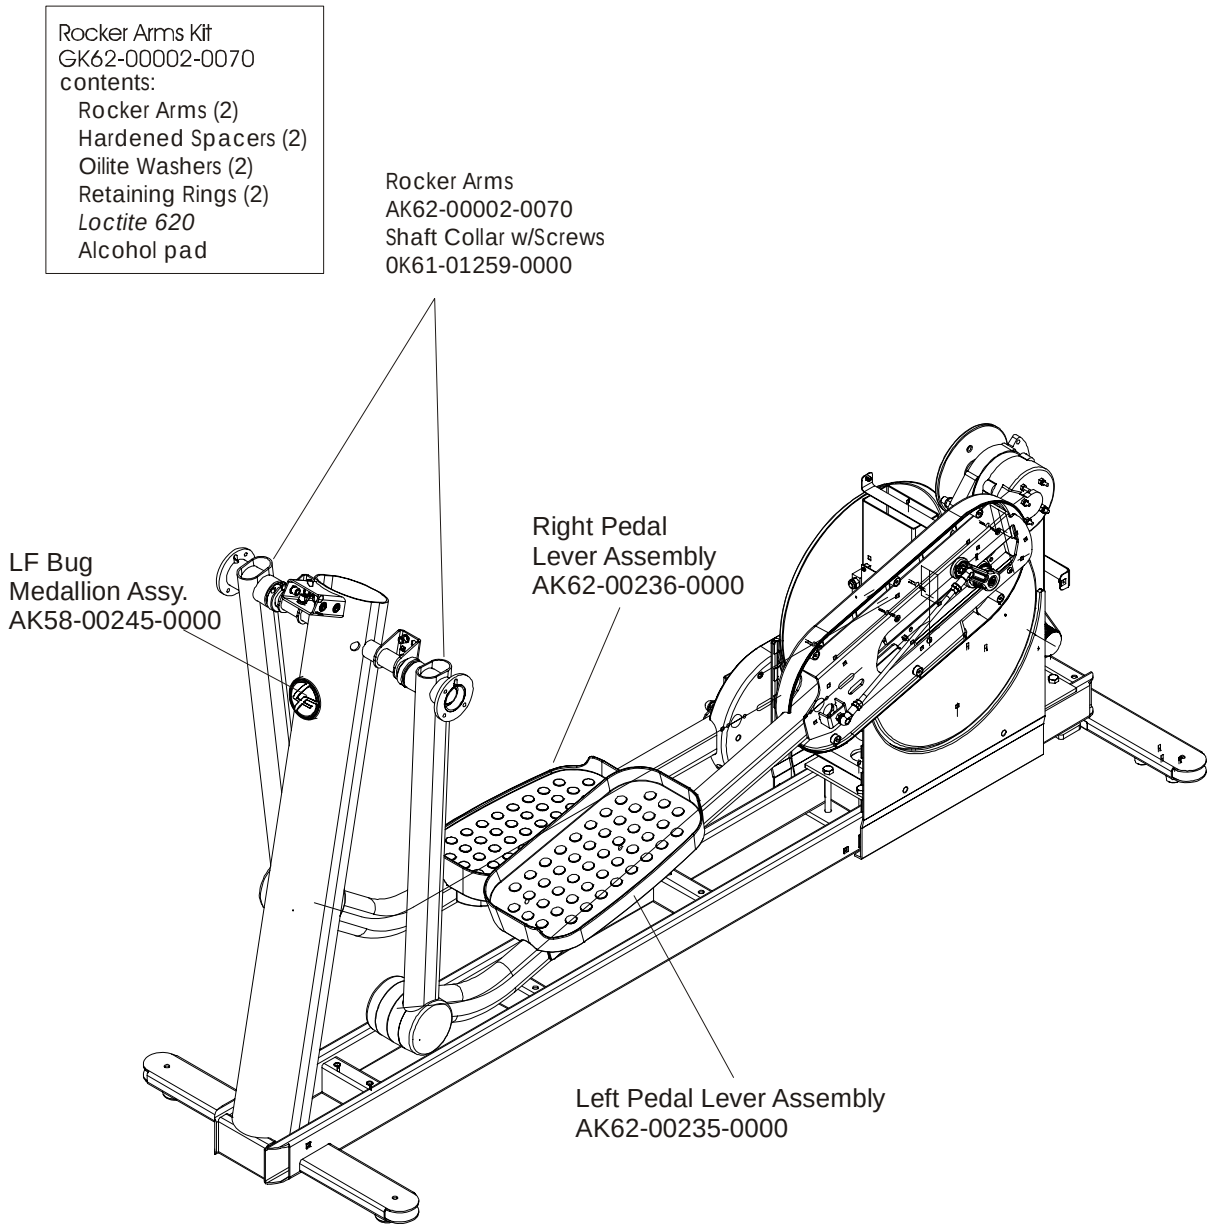
Rocker Arms Kit
GK62-00002-0070
contents:
Rocker Arms (2)
Hardened Spacers (2)
Oilite Washers (2)
Retaining Rings (2)
Loctite 620
Alcohol pad
Rocker Arms
AK62-00002-0070
Shaft Collar w/Screws
0K61-01259-0000
LF Bug
Medallion Assy.
AK58-00245-0000
Right Pedal
Lever Assembly
AK62-00236-0000
Left Pedal Lever Assembly
AK62-00235-0000

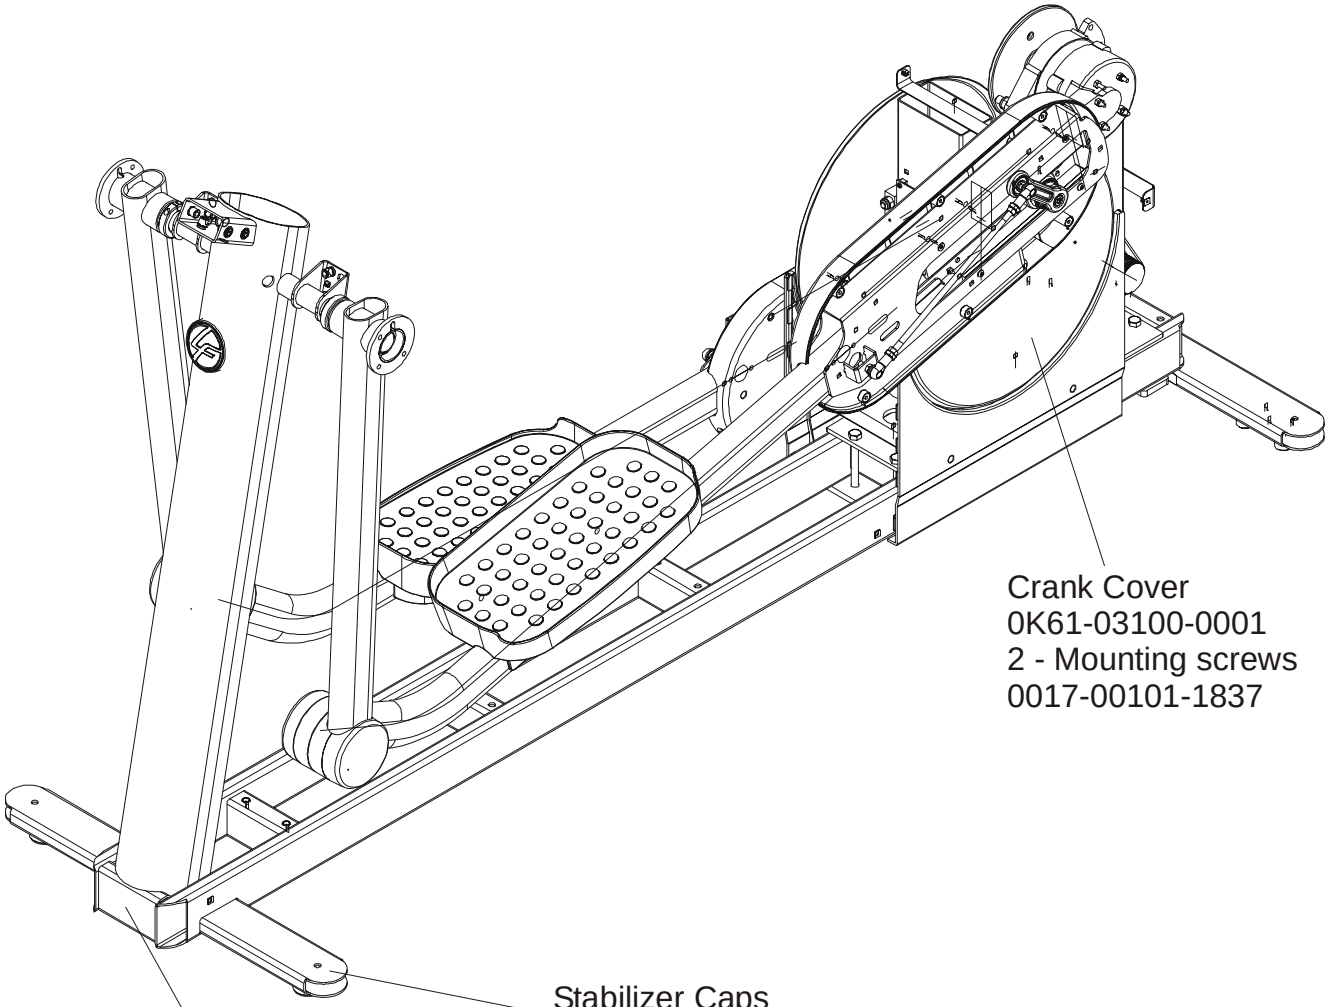
Crank Cover
0K61-03100-0001
2 - Mounting screws
0017-00101-1837
Stabilizer Caps
4 - 0K62-01003-0000
Front frame Cap
0K62-01004-0000
Mounting Screws
(Located on front sides of Ladder Frame Cover)
2- 0017-00101-1795

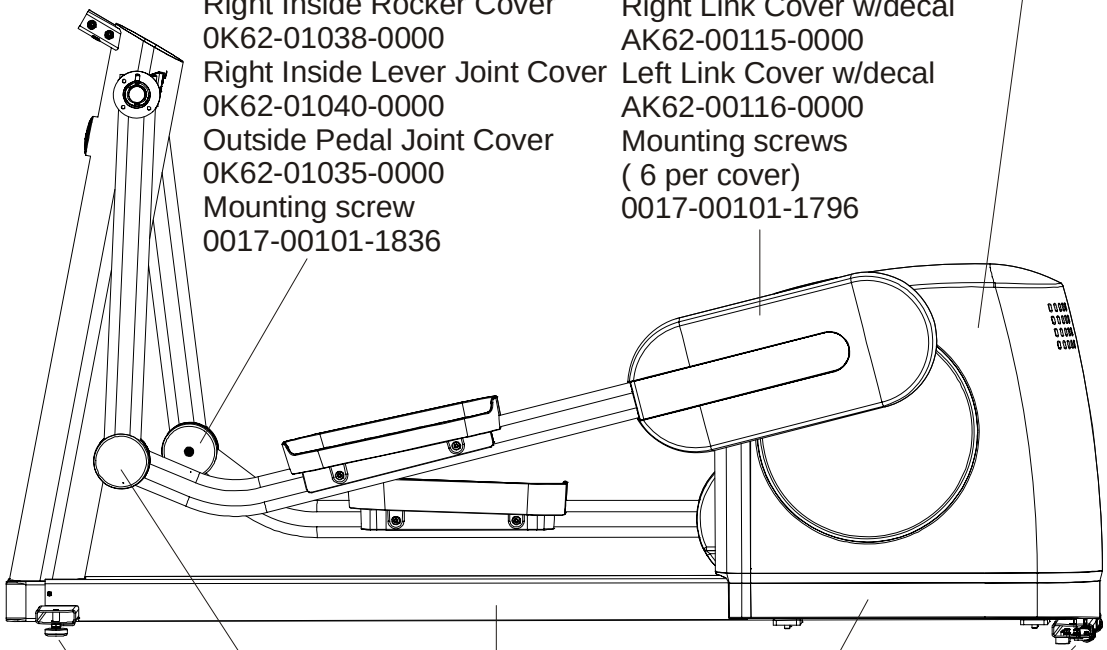

Rear Shroud Assembly
AK62-00223-0000
Mounting screws
(2 per side)
0017-00101-1796

Rocker Cover Kit
(includes clip & screw)
GK62-00002-0066
Mounting screw
0017-00101-1796
Right Inside Rocker Cover
0K62-01038-0000
Right Inside Lever Joint Cover
0K62-01040-0000
Outside Pedal Joint Cover
0K62-01035-0000
Mounting screw
0017-00101-1836

Right Link Cover w/decal
AK62-00115-0000
Left Link Cover w/decal
AK62-00116-0000
Mounting screws
(6 per cover)
0017-00101-1796

Leg Levelers
AK62-00124-0000

Ladder Frame Cover w/decal
AK62-00106-0000
4 - Mounting screws
0017-00101-1795

Wheel/Bracket Assy.
AK62-00102-0000
Mounting Screws
(3 per assy.)
0017-00101-1789

Rocker Cover Kit
(includes clip & screw)
GK62-00002-0066
Mounting screw
0017-00101-1796
Left Inside Rocker Cover
0K62-01037-0000
Left Inside Lever Joint Cover
0K62-01039-0000
Outside Pedal Joint Cover
0K62-01035-0000
Mounting Screw
0017-00101-1836

Shroud Panel
0K62-01002-0003
Mounting Screws
(2 per side)
0017-00101-1795

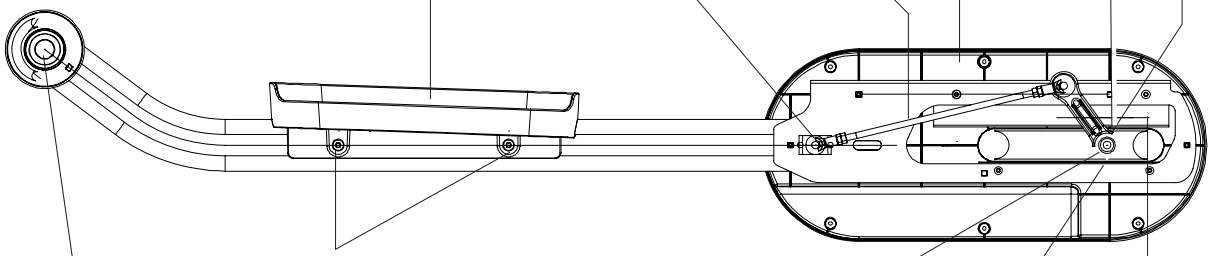

Control Link Kit
GK62-00002-0071
(contains 2 control links,
part nos. AK62-00384-0000)

Right Inside
Pedal Cover
0K62-01015-0000
Left Inside
Pedal Cover
0K62-01016-0000
5 - Mounting screws
0017-00101-1796

Control Links (2)
AK62-00384-0000

Washer
0017-00104-0479
Nut
0017-00103-0333

Left Pedal
0K62-01005-0000
Right Pedal
0K62-01006-0000

Crank Extension
Mounting Bolt
0017-00101-1907

Hex nut
0017-00103-0333

Pedal Mounting Hardware
4 - Screw - 0017-00101-1805
4 - Washer-0017-00104-0469

Roller w/bearing
AK62-00196-0001
Shaft Collar
0K62-01065-0000
Washer
0017-00104-0474
Brass Washer
0K47-01104-0000
Anti-Lift Roller
0K62-01191-0000

Roller Extrusion
AK62-00197-0000
2 - Screws
0017-00101-1789

Anti-Lift Track
0K62-01193-0000
2 - Screws
0017-00101-1836

Pedal/Rocker Shaft & Bearings
Order Kit GK62-00002-0001
E-Ring
0017-00100-0107
Thrust Washer
0K47-01105-0000
Brass Washer
0K47-01104-0000

Note: If replacing the Tie Rod Assembly or Crank Extension for the first time, order kit GK62-00002-0015. Both sides must be replaced simultaneously in this situation.

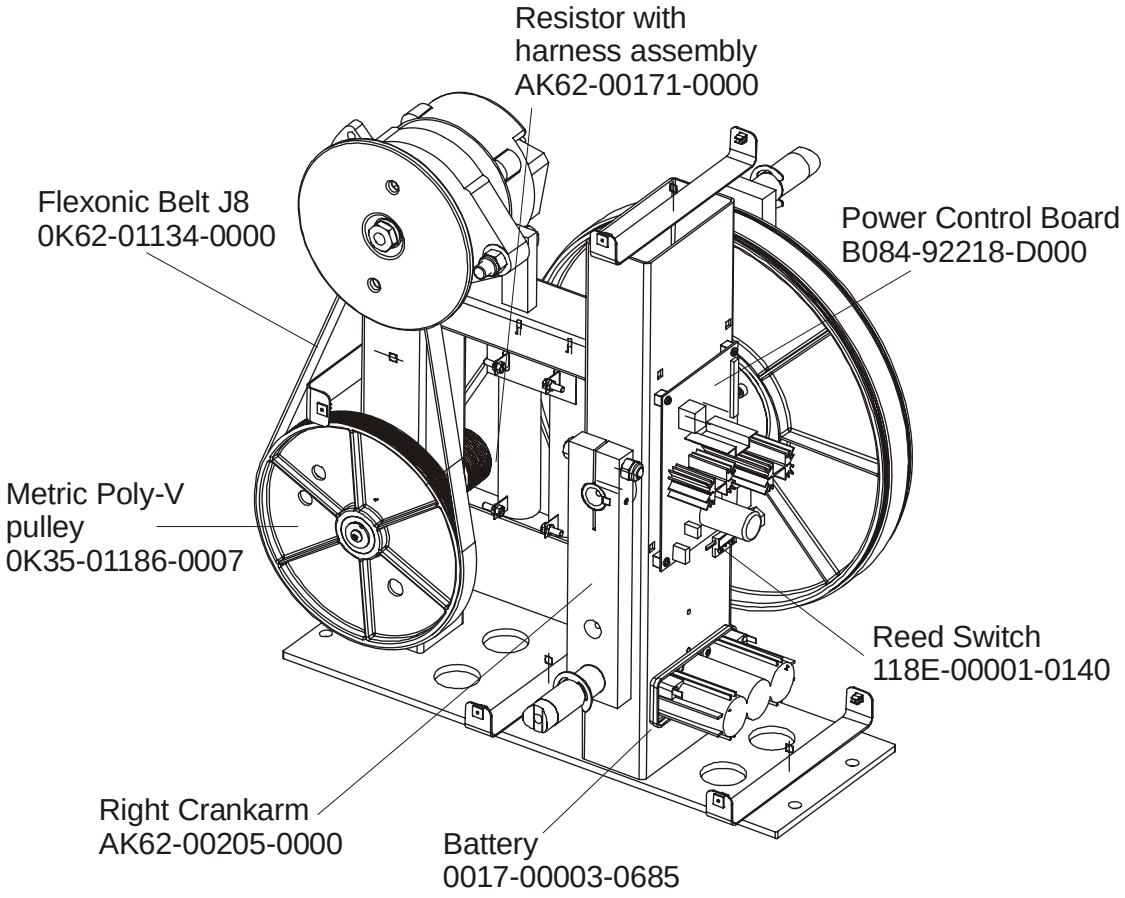
Resistor with
harness assembly
AK62-00171-0000
Flexonic Belt J8
0K62-01134-0000
Power Control Board
B084-92218-D000
Metric Poly-V
pulley
0K35-01186-0007
Reed Switch
118E-00001-0140
Right Crankarm
AK62-00205-0000
Battery
0017-00003-0685

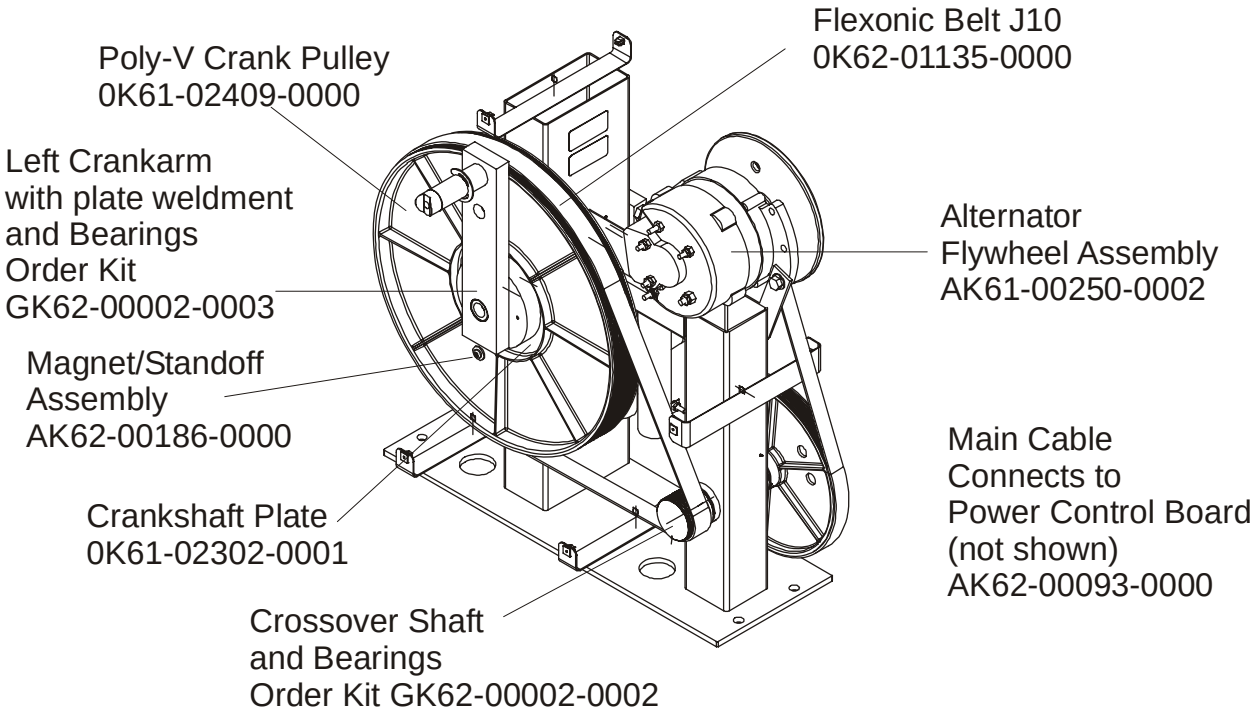
Flexonic Belt J10
0K62-01135-0000
Poly-V Crank Pulley
0K61-02409-0000
Left Crankarm
with plate weldment
and Bearings
Order Kit
GK62-00002-0003
Alternator
Flywheel Assembly
AK61-00250-0002
Magnet/Standoff
Assembly
AK62-00186-0000
Main Cable
Connects to
Power Control Board
(not shown)
AK62-00093-0000
Crankshaft Plate
0K61-02302-0001
Crossover Shaft
and Bearings
Order Kit GK62-00002-0002

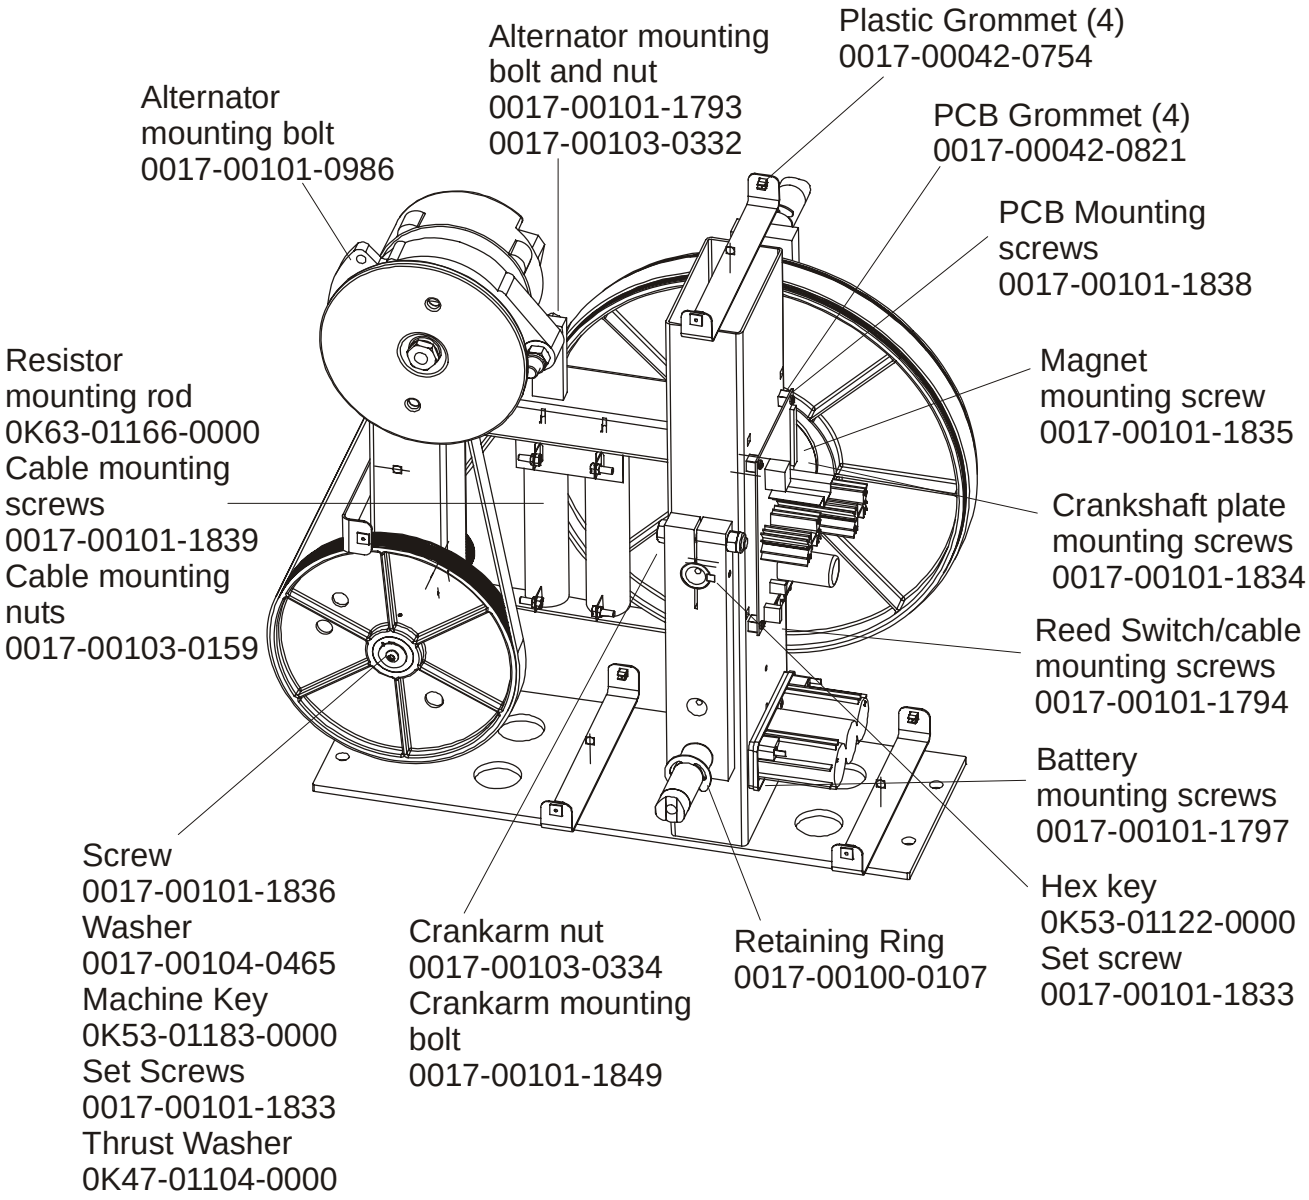

UNLABELED PARTS	
DESCRIPTION	**PART NO.**
BATTERY: 6V; 2.5AH C	0017-00003-0685
CVR-ASSY: W/DCLS:FRM;FSCT;MFG S/C-D	AK62-00106-0000
MANUAL: OPER; 93X/90X;ENG +	M051-00K62-A111

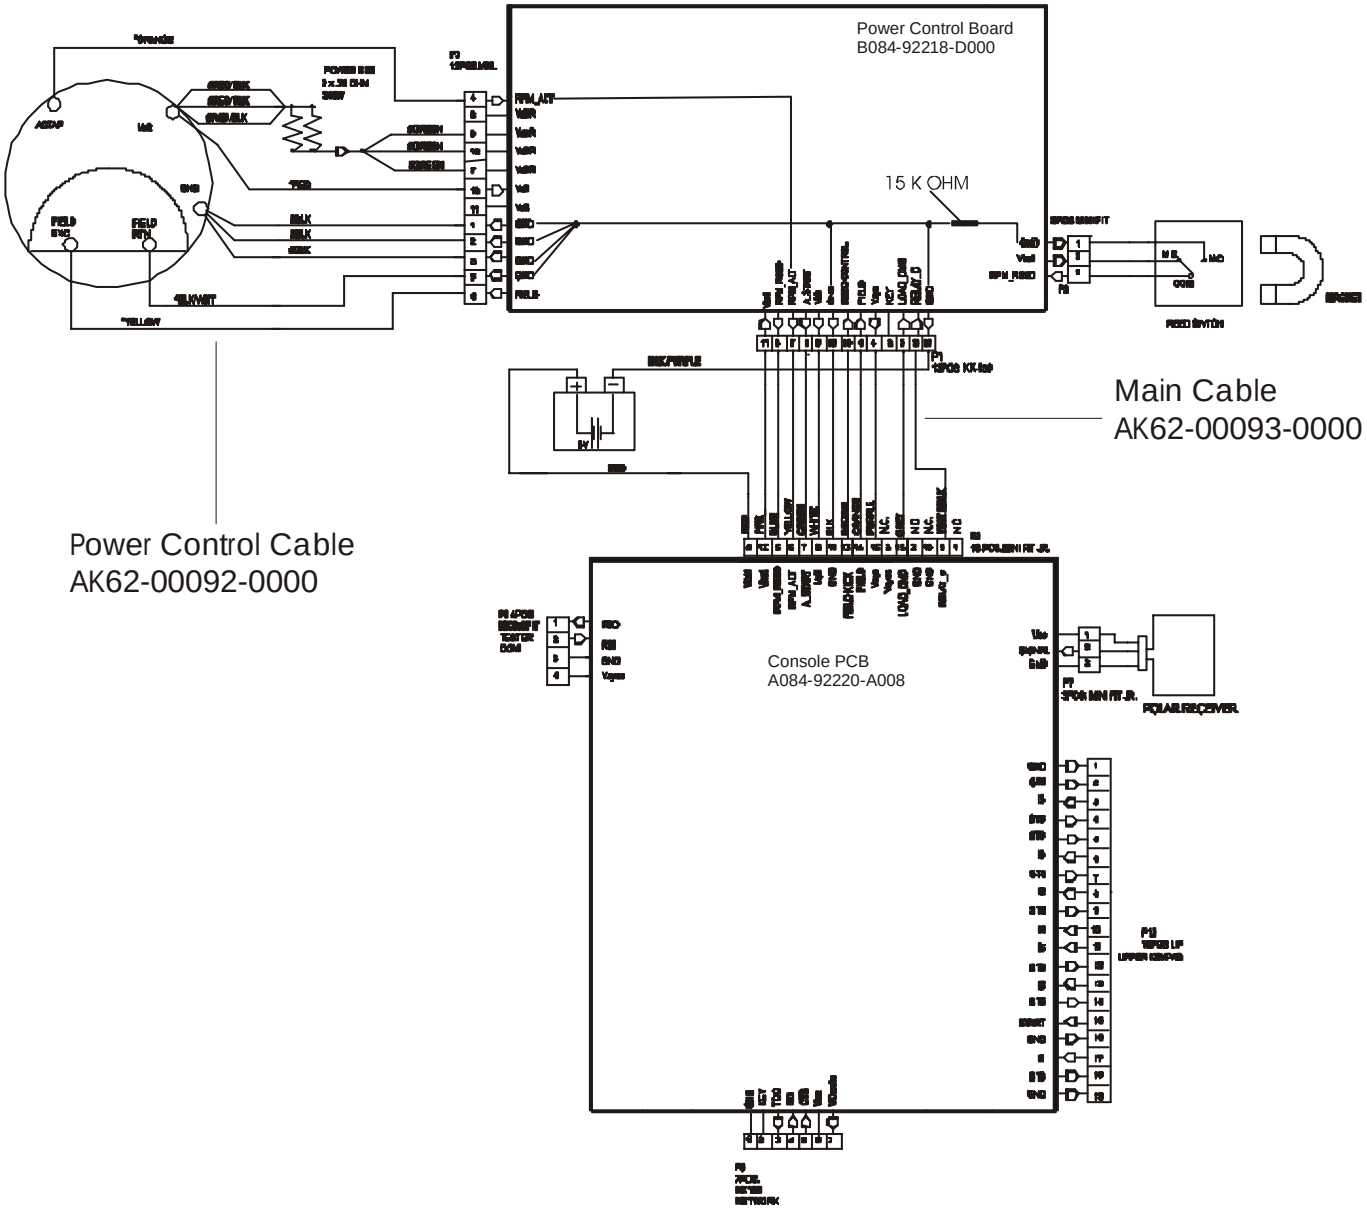
Power Control Board
B084-92218-D000
15 K OHM
Main Cable
AK62-00093-0000
Power Control Cable
AK62-00092-0000
Console PCB
A084-92220-A008